


Left Hand Plate
(Flame Points Left)
Top Burner Plate*

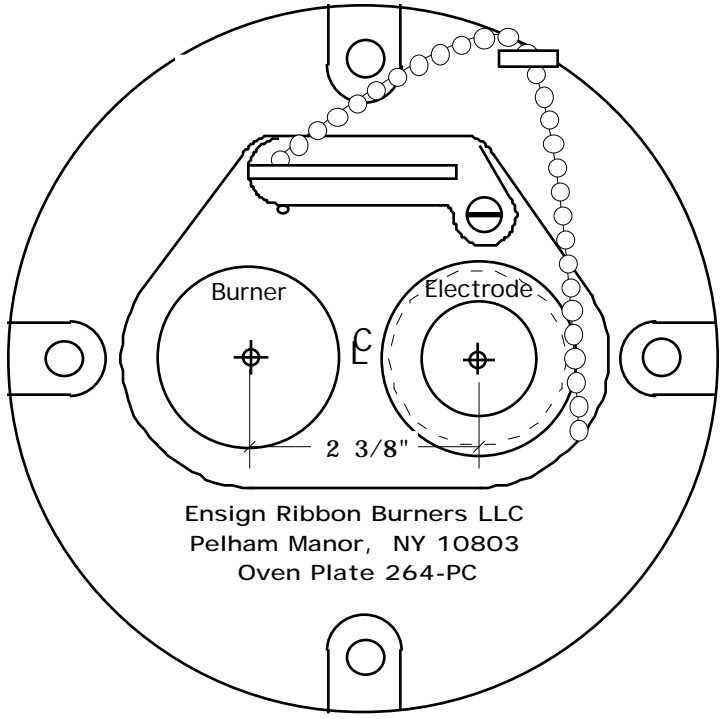

Right Hand Plate
(Flame Points Right)
Bottom Burner Plate*

* When used with burners firing vertically

Part # for Plates

800-040-4-__ 1" Burner

800-040-5-__ 1-1/4" Burner

800-040-6-__ 1-1/2" Burner

800-040-8-__ 2" Burner

First blank to be E (6-1/4" Bolt Centers) or F (6-3/8" Bolt Centers)

Second Blank to designate Left Hand (L) or Right Hand (R)

<p>ERB Ensign Ribbon Burners LLC 101 Secor Lane Pelham Manor NY 10803</p>
<p>Burner Plates</p>